


**Reservdelistsa/Spare part list/Ersatzteilliste
Truckladdare/Battery charger/Ladegerät**

STC 36/80

In/Input/Eingan	3x380-400V+N 50Hz
Ut/Output/Ausgang	36V DC 80A
Recommended Primary Ca	5x1,5mm ²
Secondary cabl	-
Primärström/Primary current (A/Ph	6,6 A
Elschema/Circuit diagram/Schaltpl	E-2840
Kapsling/Cabinet/Gehäus	W1

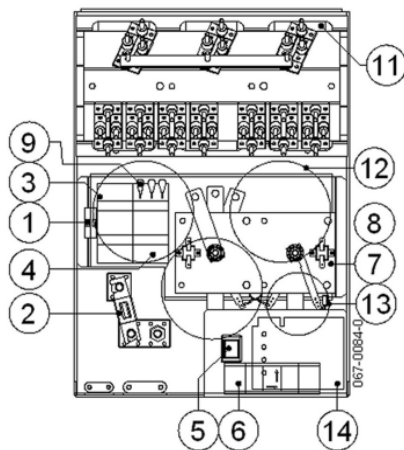

Pos	Benämning/Name/Benennu	Ref	Data
1	Säkring/Fuse/Sicherung	F	-
2	Säkring/Fuse/Sicherung	F	3010003 SIBA 80A
3	Kontaktor/Contactor/Kontaktor	K1	3404013 9A 230V 50-60Hz
4	Kontaktor/Contactor/Kontaktor	K2	-
5	Strömbrytare/Switch/Stromschalte	S1	3602001 mains switch standard
6	Fläkt/Fan/Ventilator	E	3801001 220-240VAC 120x12 1 pcs out + - pcs heat sink
7	Diod/Diode/Diode pos	D	Pressdiod
8	Diod/Diode/Diode neg	D	Pressdiod
9	Motstånd/Resistor/Widerstand	R	-
10	Varistor/Varistor/Varistor	Va1	-
11	Transformator/Transformer/Transformator	T	5243382 3 pcs
12	Drossel/Choke/Drossel	L	5600220 3 pcs
13	Manöver trafo/Aux.transf/	T	- - pcs
14	Styrkort/Main pcb/Haupt l.b	U1	8001150 KK1153 STC 36V 3-phase