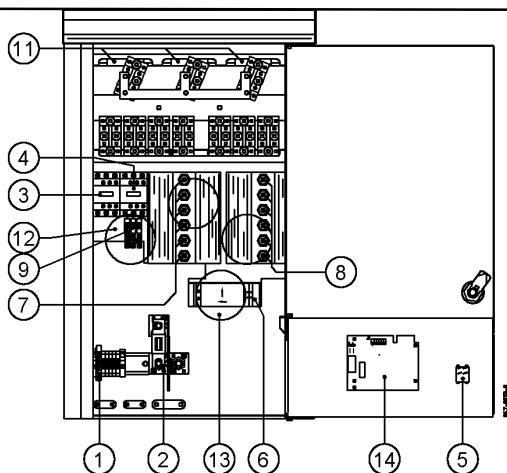


Reservdelislista/Spare part list/Ersatzteilliste**Truckladdare/Battery charger/Ladegerät Typ/Type/Typ:**

STC 48/100

In/Input/Eingang: 3x380-400V+N 50Hz**Ut/Output/Ausgang:** 48V DC 100A**Recommended Primary Cable:** 5x1,5mm²**Secondary cable:** -**Primärström/Primary current (A/Phase):** 11,0 A**Elschema/Circuit diagram/Schaltplan #:** E-2682**Kapsling/Cabinet/Gehäuse:** W4

Pos	Benämning/Name/Benennung	Ref	Data
1	Säkring/Fuse/Sicherung	F	3006001 1,25AT 5x20mm
2	Säkring/Fuse/Sicherung	F	3010004 SIBA 100A
3	Kontaktor/Contactor/Kontaktor	K1	3404001 9A 230V 50-60Hz
4	Kontaktor/Contactor/Kontaktor	K2	3404001 9A 230V 50-60Hz
5	Strömbrytare/Switch/Stromschalter	S1	3602001 mains switch standard
6	Fläkt/Fan/Ventilator	E	3801001 220-240VAC 120x120 1 pcs out + - pcs heat sink
7	Diod/Diode/Diode pos	D	4302001 3 pcs 40HF40
8	Diod/Diode/Diode neg	D	4302002 3 pcs 40HFR40
9	Motstånd/Resistor/Widerstand	R	4621001 100R 6W CW-5
10	Varistor/Varistor/Varistor	Va1	-
11	Transformator/Transformer/Transformator	T	5244422 3 pcs
12	Drossel/Choke/Drossel	L	5600240 3 pcs
13	Manöver trafo/Aux.transf/	T	- - pcs
14	Styrkort/Main pcb/Haupt l.b	U1	8001141 KK1153 STC 48V 3-phase