


**Reservdelistsa/Spare part list/Ersatzteilliste
Truckladdare/Battery charger/Ladegerät**

STC 80/80

In/Input/Eingan	3x380-400V+N 50Hz
Ut/Output/Ausgang	80V DC 80A
Recommended Primary Ca	5x2,5mm ²
Secondary cabl	-
Primärström/Primary current (A/Ph	14,5 A
Elschema/Circuit diagram/Schaltp	E-2880
Kapsling/Cabinet/Gehäus	F2_PD

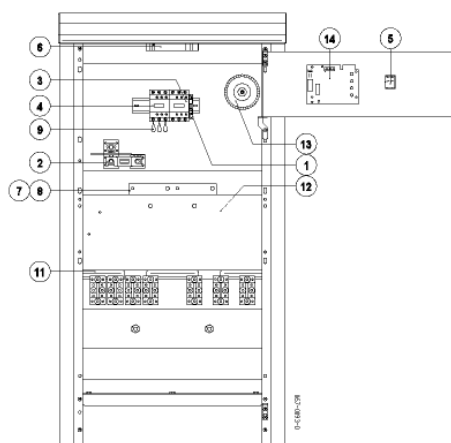

Pos	Benämning/Name/Benennu	Ref	Data
1	Säkring/Fuse/Sicherung	F	3006001 1,25AT 5x20mm
2	Säkring/Fuse/Sicherung	F	3010003 SIBA 80A
3	Kontaktor/Contactor/Kontaktor	K1	3404003 18A 230V 50-60Hz
4	Kontaktor/Contactor/Kontaktor	K2	3404001 9A 230V 50-60Hz
5	Strömbrytare/Switch/Stromschalte	S1	3602001 mains switch standard
6	Fläkt/Fan/Ventilator	E	3801001 220-240VAC 120x12 1 pcs out + 1 pcs heat sink
7	Diod/Diode/Diode pos	D	Pressdiod
8	Diod/Diode/Diode neg	D	Pressdiod
9	Motstånd/Resistor/Widerstand	R	PTC Thermistor 110MA 265V
10	Varistor/Varistor/Varistor	Va1	-
11	Transformator/Transformer/Transformator	T	5247382 3 pcs
12	Drossel/Choke/Drossel	L	5600260 3 pcs
13	Manöver trafo/Aux.transf/	T	- - pcs
14	Styrkort/Main pcb/Haupt l.b	U1	8001148 KK1153 STC 80V 3-phase